

Match the router bit to the material you're working

To use this chart, start with the type of material you're routing. Then decide whether you'll be doing more plunge routing or edge work. From there, trace the colored line to the best straight or spiral bit(s) for your application.

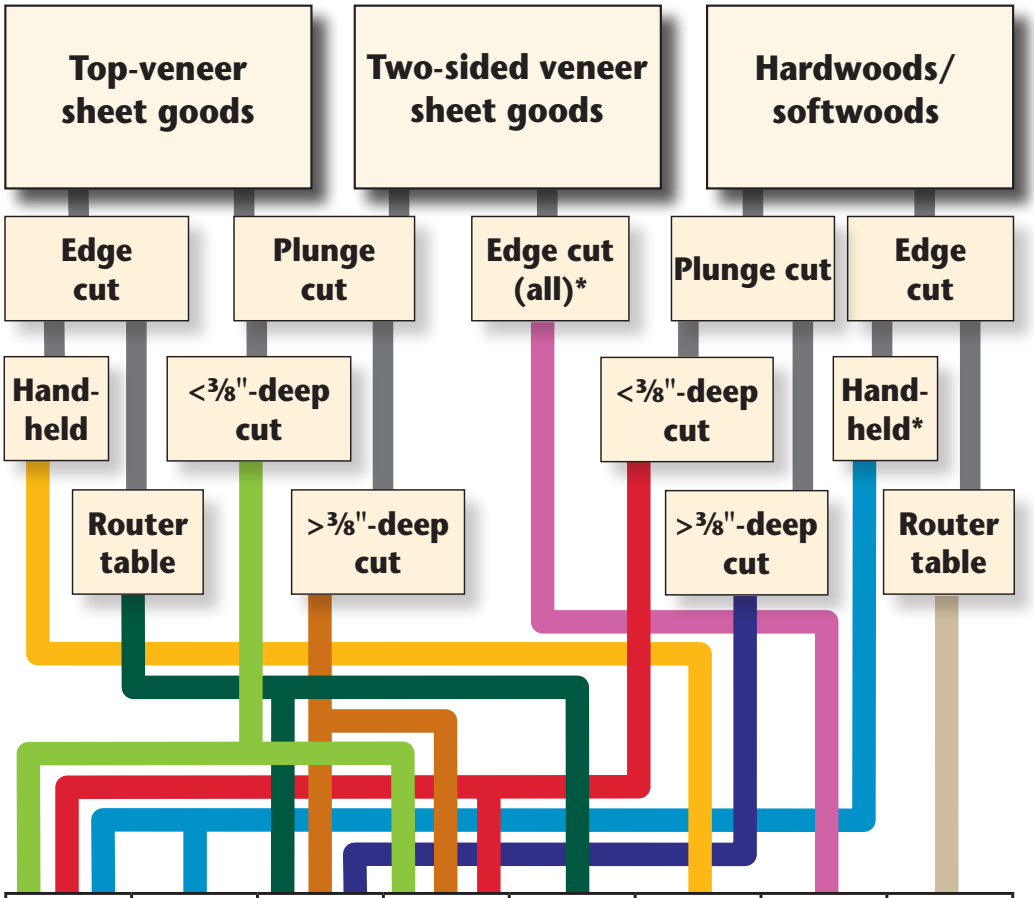

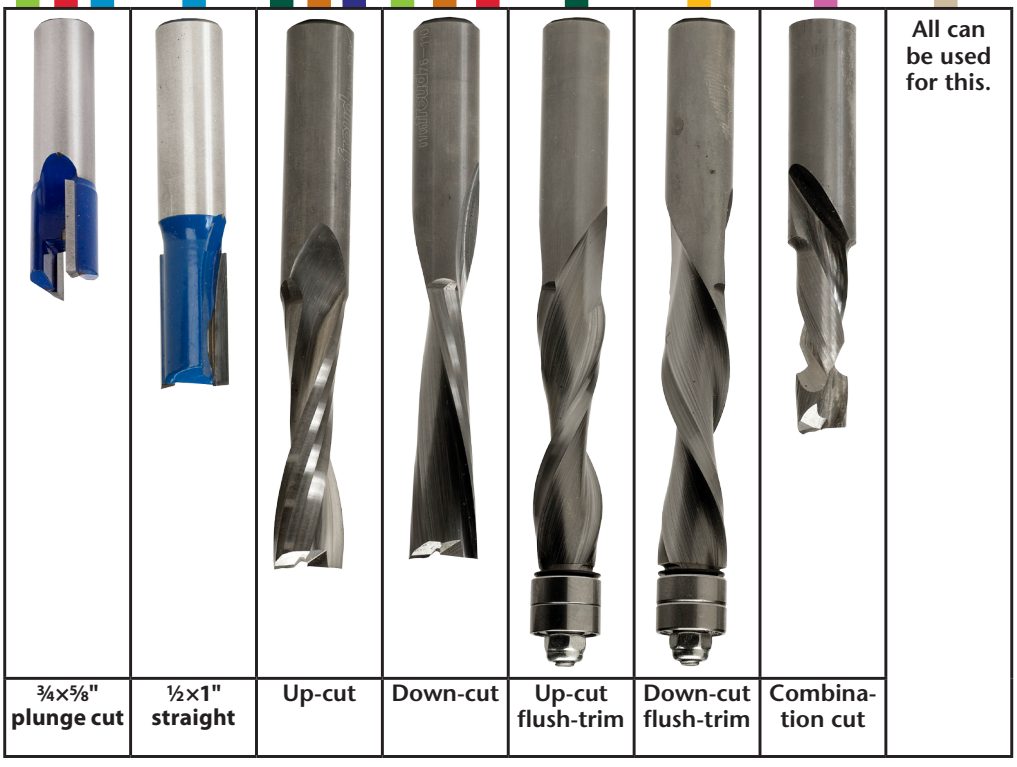

*Handheld routing with non-bearing bits requires a router edge guide.